

12V150 Flicker Update Instructions

Must have internet connection before starting update

Step 1: Remove all connections from the negative post of battery being updated

Step 2: Go to "Settings" on your phone and turn Bluetooth on

Step 3: Open IonicBlueBatteries and disconnect from any batteries



Step 4A: If on iPhone, go to the App Store



Step 4B: If on Android go to the Play Store



Step 5: Type "BMS Upgrade" into the search bar


Step 6: Download the "BMS UPGRADE" app




Step 7: Open the BMS UPGRADE app

Step 8: If on Android press "Search", on iPhone press "Connect"

Step 9: Find and connect to the 12V150Ah battery needing the update

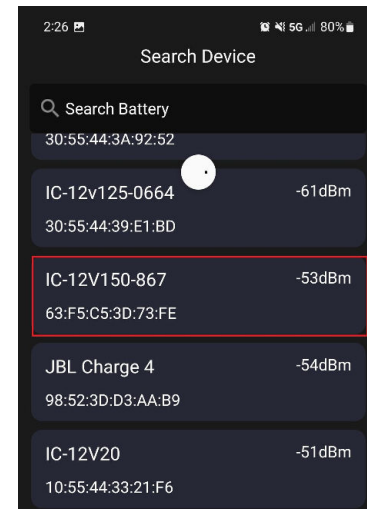

Step 10: Once connected press "12V150Ah Flicker Fixes"

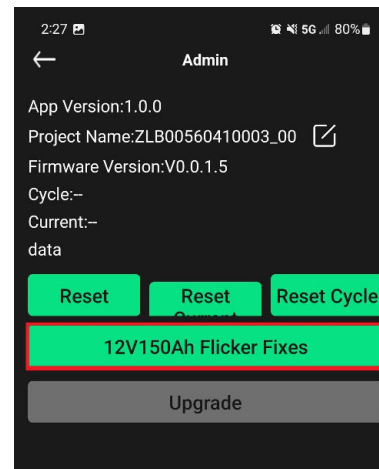

Step 11: Battery is updated and normal use can be resumed